


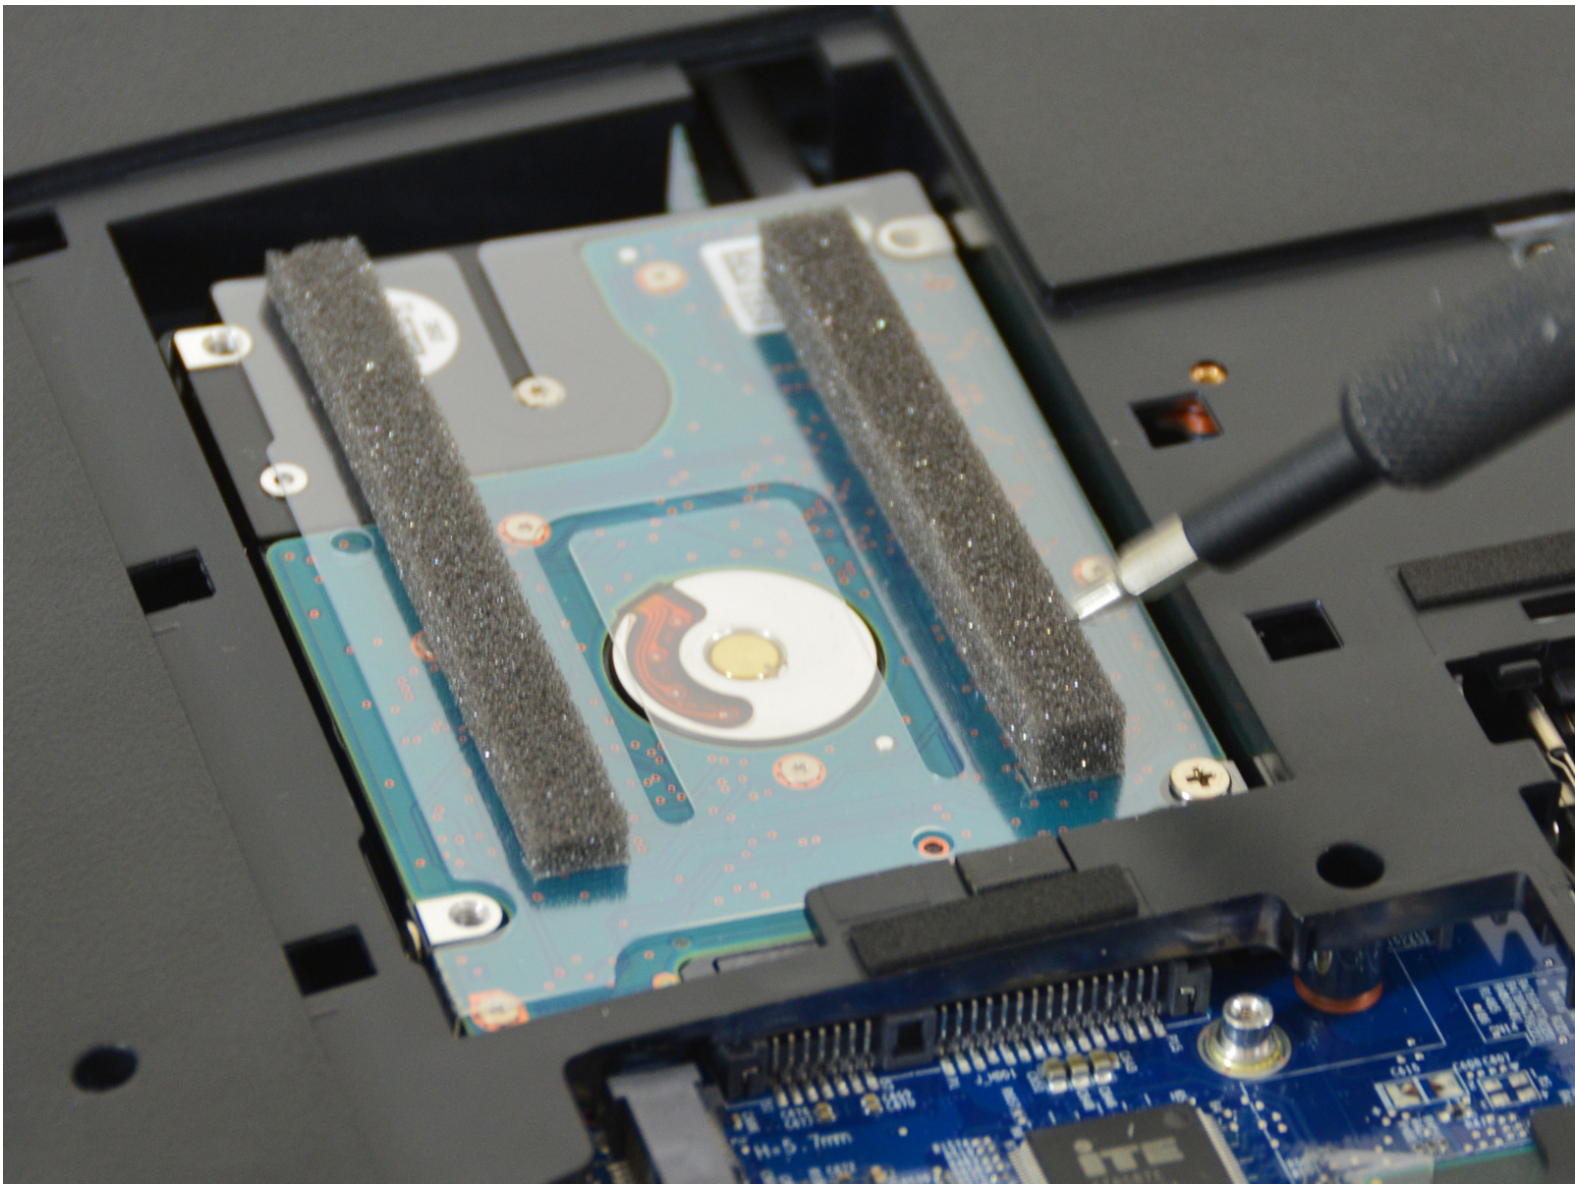


why! W670SZQ1 Replacing Hard Drive (Mass Storage)

Written By: Felice Suglia





Step 1 — Battery

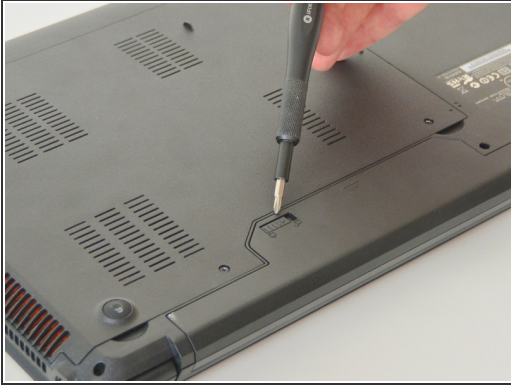



- Unlock the left latch.
- Unlock the right latch.
- Remove the battery while maintaining the unlocked latch.

Step 2 — Access to the Main Components

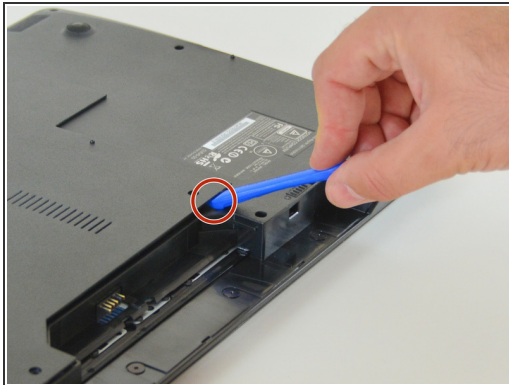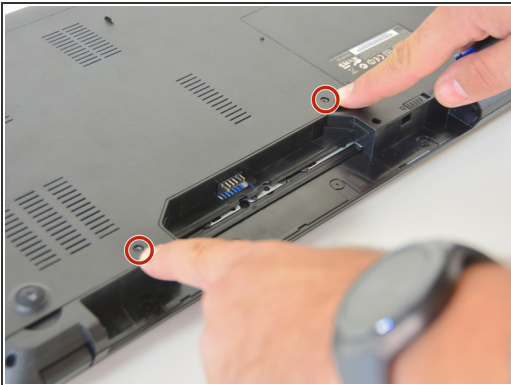

- Using the Philips screwdriver # 0, remove the 2 screws from the bottom cover.
- Lift the bottom right cover with the iFixit Opening Tool.
- Lift the cover lower left with the iFixit Opening Tool.
- Finally completely clear the lower cover to view the main components.

Step 3 — hard drive (mass storage)

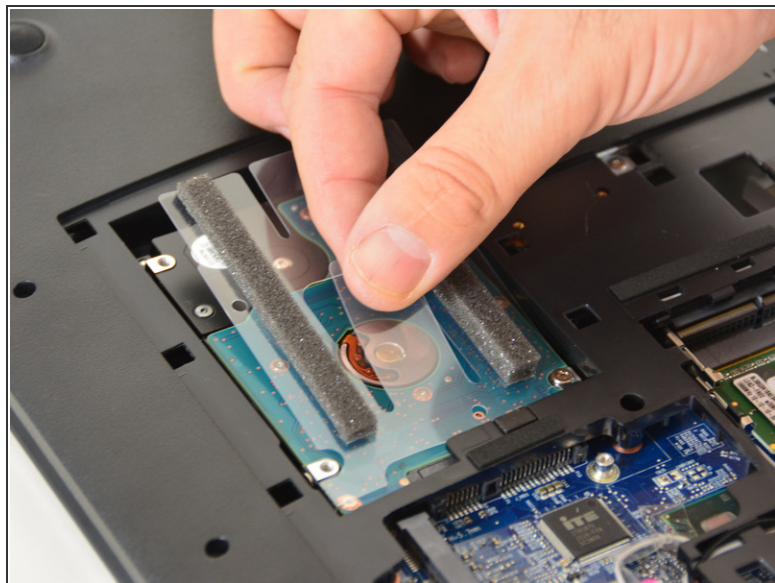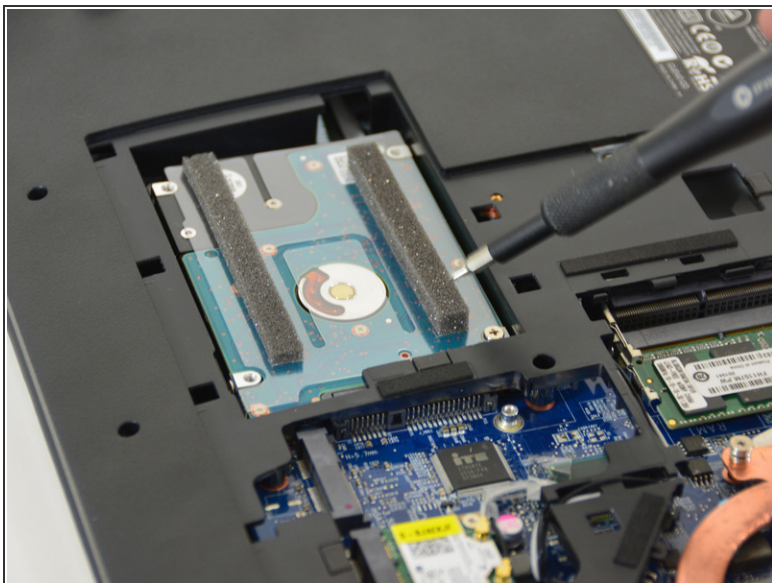

- Locate the hard drive with its plastic tab.
- Remove the HDD from its SATA port using the plastic tab

Pour réassembler votre appareil, suivez les instructions dans l'ordre inverse.

This document was last generated on 2017-07-19 04:16:03 PM.